

# CoverShelf

## Installation instructions

QTY	DESCRIPTION
16	#10 x 1" Phillip Pan zinc plated screw
16	Small black dome cap

### Step #1

Install mounting brackets far enough apart to support the spa cover and so that the top of the Aluminum bars will be even with the top of the spa.



### Step #2

Secure each plastic bracket with 8 #10 x 1" screws (see Fig 1). Place black dome cap on each screw.

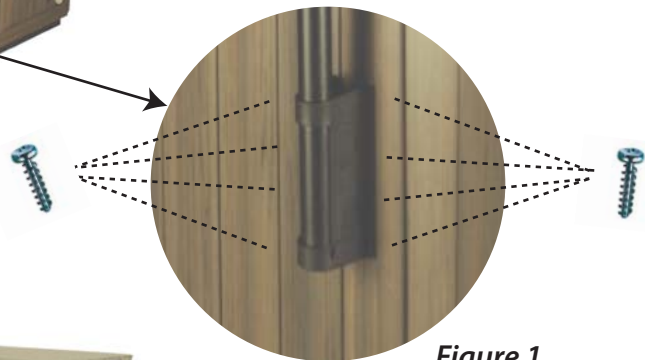


Figure 1



### Step #3

Extend aluminum bars. Fold Spa Cover and slide onto shelf.

