


# Safe-T-Rail II

Installation Instructions - Updated as of 09/28/17

**Figure 1**

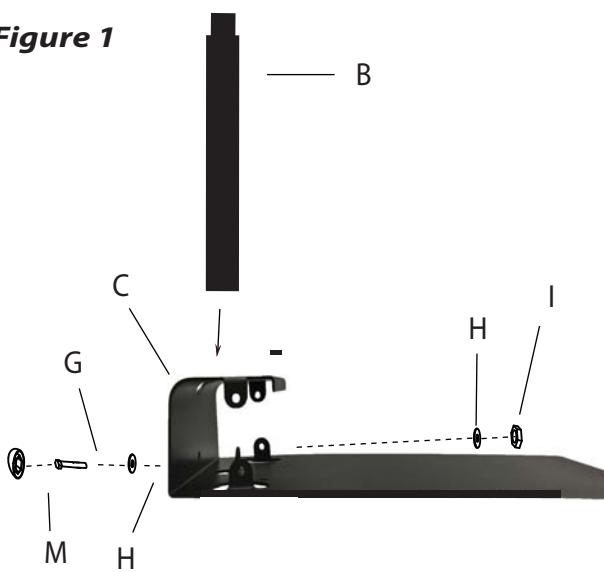

**Step #1**

Slide the Safe-T-Rail handle-lower into the Safe-T-Rail base and attach using the 3/8 x 2-3/4" hex bolt, washers and locknut (See Fig 1).

**Step #2**

Attach the Safe-T-Rail base cover to the Safe-T-Rail base using the 1/4 x 3/4" flat head screws (See Fig 2).

**Step #3**

Attach the Safe-T-Rail struts to the sides of the Safe-T-Rail base using the 5/16 x 3/4" bolts and 5/16 locknuts (See Fig 3).


**Step #4**

Slide the Safe-T-Rail bracket onto the Safe-T-Rail II handle-upper. Next, peel the white backing off the Safe-T-Rail II bracket pad and attach to the Safe-T-Rail bracket (See Fig 4). **Note, this does not get attached to the spa cabinet. It is a bumper only.**


**Step #5**

Slide the Safe-T-Rail II handle-upper over the Safe-T-Rail II handle-lower and attach the struts using a 3/8 x 2-3/4" hex bolt, washers (2) and locknut (See Fig 5).


**Figure 2**

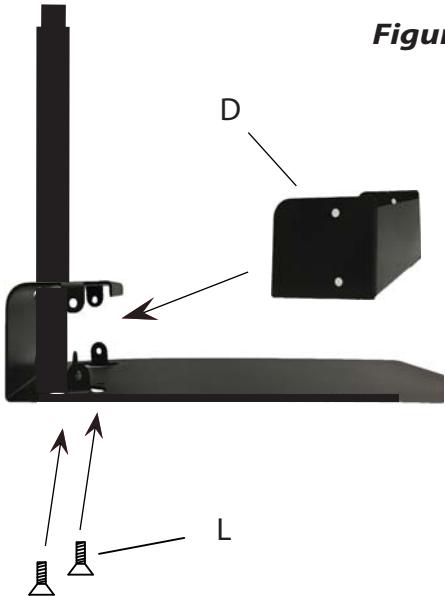


**Figure 3**

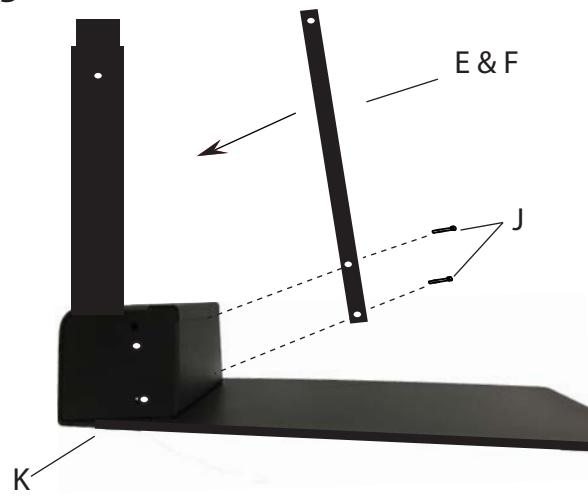

**Figure 4**

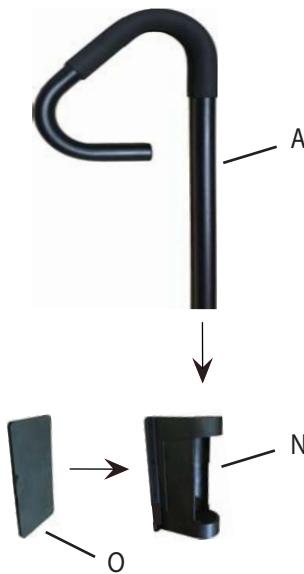

**Figure 5**

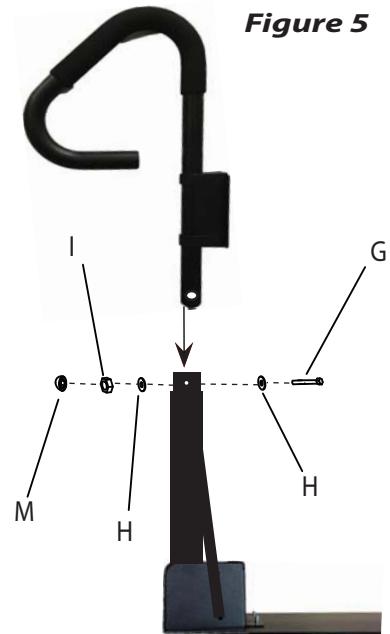

ITEM	PART#	DESCRIPTION	QTY
A	101296	SAFE-T-RAIL II HANDLE UPPER	1
B	101297	SAFE-T-RAIL II HANDLE LOWER	1
C	101298	SAFE-T-RAIL II BASE	1
D	101299	SAFE-T-RAIL II BASE COVER	1
E	101300	SAFE-T-RAIL II STRUT - LEFT	1
F	101327	SAFE-T-RAIL II STRUT - RIGHT	1
G	101294	3/8 X 2-3/4" BOLT - BLACK ZINC	2
H	100951	3/8 FLAT WASHER - BLACK ZINC	4
I	100838	3/8 LOCKNUT - BLACK ZINC	2
J	101293	5/16 X 3/4" BOLT - BLACK ZINC	4
K	100841	5/16 LOCKNUT - BLACK ZINC	4
L	101396	1/4 X 3/4" FLAT HEAD SCREW - BLACK ZINC	2
M	100015	LARGE BLACK DOME CAP	3
N	100295	SAFE-T-RAIL BRACKET	1
O	101328	STR BRACKET PAD	1