

Step #1

Slide the Safe-T-Rail handle-lower into the Safe-T-Rail base and attach using the 3/8 x 2-3/4" hex bolt, washers and locknuts (see Fig. 1).

Step #2

Attach the Safe-T-Rail base cover to the Safe-T-Rail base using the 1/4 x 3/4" flat head screws (see Fig. 2).

Step #3






Attach the Safe-T-Rail struts to the sides of the Safe-T-Rail base using the 5/16 x 3/4" bolts and 5/16 locknuts (see Fig. 3).

Step #4

Slide the Safe-T-Rail bracket onto the Safe-T-Rail II handle-upper. Next, peel the white backing off the Safe-T-Rail II bracket pad and attach to the Safe-T-Rail bracket (see Fig. 4). **Note: This does not get attached to the spa cabinet. It is a bumper only.**

Step #5

Slide the Safe-T-Rail handle-upper over the Safe-T-Rail II handle-lower and attach the struts using a 3/8 x 2-3/8" hex bolt, washers and locknuts (see Fig. 5).

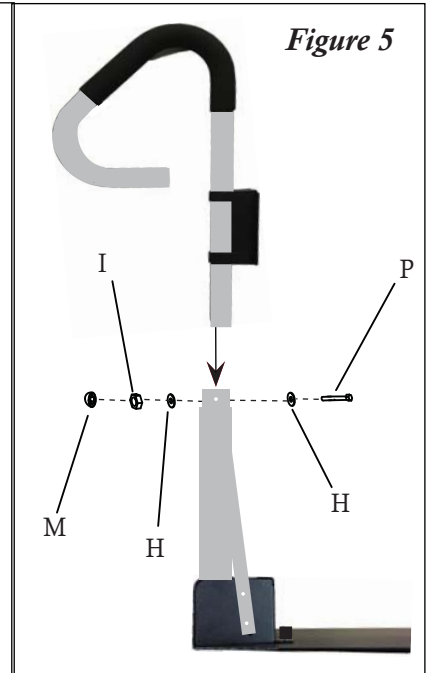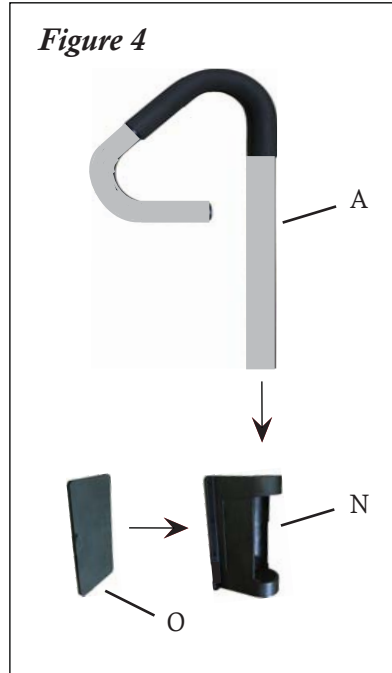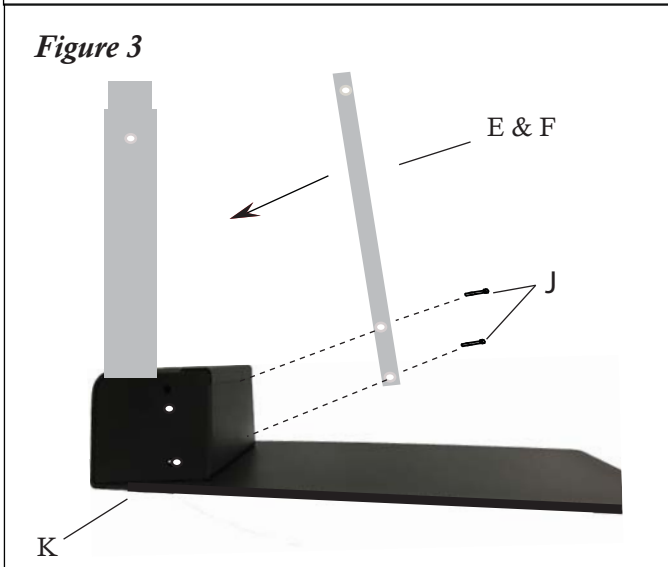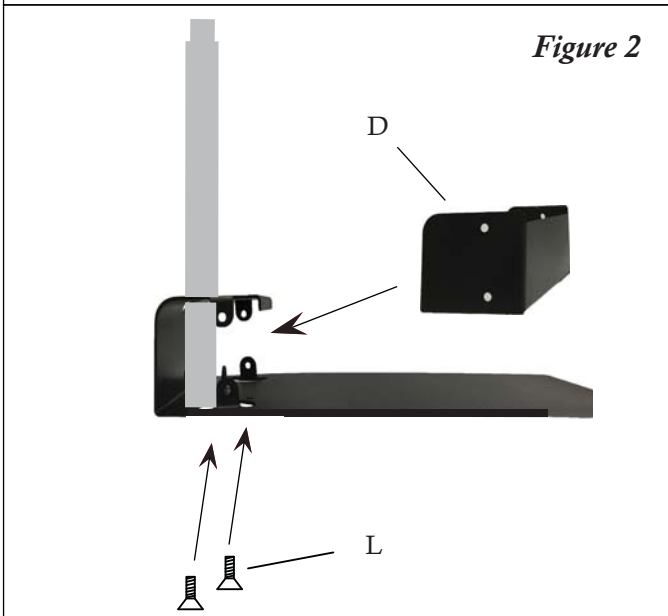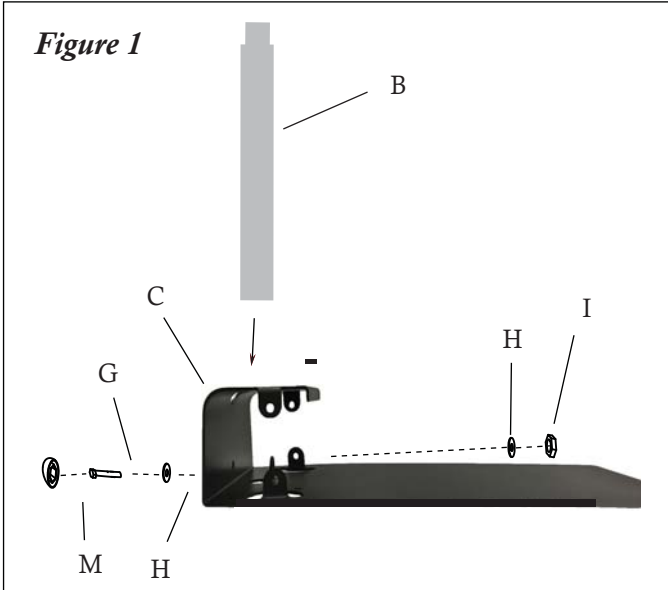

| | | | |
|---|--------|---|---|
| A | 101289 | SAFE-T-RAIL II HANDLE UPPER - STAINLESS | 1 |
| B | 101290 | SAFE-T-RAIL II HANDLE LOWER - STAINLESS | 1 |
| C | 101298 | SAFE-T-RAIL II BASE | 1 |
| D | 101299 | SAFE-T-RAIL II BASE COVER | 1 |
| E | 101291 | SAFE-T-RAIL II STRUT-LEFT - STAINLESS | 1 |
| F | 101292 | SAFE-T-RAIL II STRUT-RIGHT - STAINLESS | 1 |
| G | 101306 | 3/8 X 2-3/4" BOLT - STAINLESS | 1 |
| H | 101307 | 3/8 FLAT WASHER - STAINLESS | 4 |
| I | 100011 | 3/8 NYLON LOCKNUT | 2 |
| J | 101303 | 5/16 X 3/4" BOLT - STAINLESS | 4 |
| K | 100032 | 5/16 NYLON LOCKNUT | 4 |
| L | 101396 | 1/4-20 X 3/4" FLAT HEAD SCREWS - BLACK ZINC | 2 |
| M | 100015 | LARGE BLACK DOME CAP | 3 |
| N | 100295 | SAFE-T-RAIL BRACKET | 1 |
| O | 101328 | STR BRACKET PAD | 1 |
| P | 101609 | 3/8 X 2-1/4" BOLT - STAINLESS | 1 |