

Freestanding Umbrella Base

Installation Instructions - Updated as of 06/21/16

Step #1

Insert the umbrella support post into the hole in the umbrella base.

Note: Make sure the post is inserted flush with the bottom of the umbrella base.

Step #2

Attach the mounting stand base plate to the mounting stand post with the 3 mounting stand screws.

Step #3

Insert the mounting stand into the hole in the bottom of the umbrella base.

Step #4



With a standard screwdriver, pop out the two caps on the top of the umbrella base. Fill umbrella base with sand. Replace the 2 caps on the top of the umbrella base. **Note: Minimum of 150 - 200 lbs of sand required for proper operation of your Freestanding Umbrella Base.**

Step #5

Slide the SpaUmbrella onto the umbrella support post and connect the (2) socket button head screws and binding barrells supplied with the SpaUmbrella.

Step #6

Attach the crank handle to the umbrella crank using the #8 x 3/4" black zinc pan head machine screw supplied with the SpaUmbrella (see diagram below).

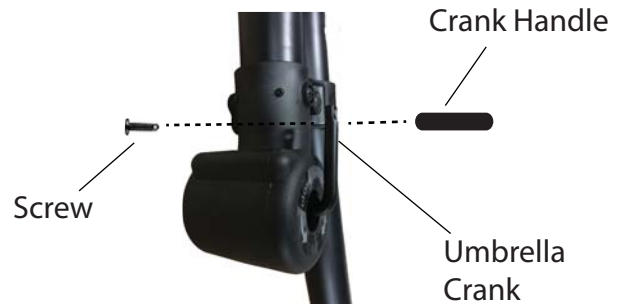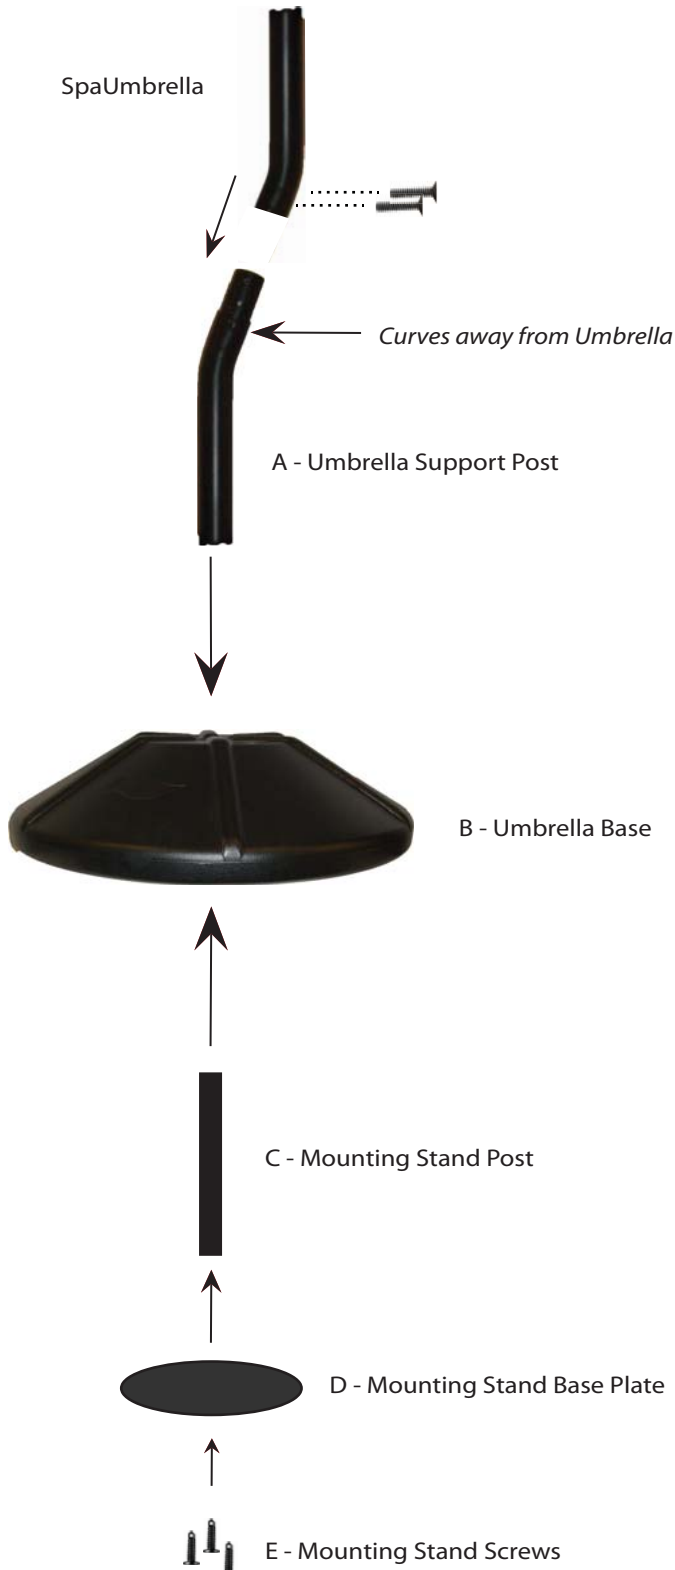

CAUTION

Do not use the SpaUmbrella in high wind condition (greater than 10 m.p.h). Injury from the SpaUmbrella being blown over and impacting the spa user can occur.

ITEM	PART#	DESCRIPTION	QTY
A	100966	UMBRELLA SUPPORT POST	1
B	100974	UMBRELLA BASE	1
C	100976	MOUNTING STAND POST	1
D	100978	MOUNTING STAND BASE PLATE	1
E	100979	#8 x 3/4" MOUNTING STAND SCREWS	3