


Step #1

Position each CoverCatch bracket on back of spa. The location of each CoverCatch should be 12 inches from the ground and spaced 24 to 36 inches apart (see Fig. 1).

Step #2

Using the #10 x 1" Mounting Screws attach the CoverCatch to the side of the spa. Place the small black dome caps over the screw heads after tightening the screws.

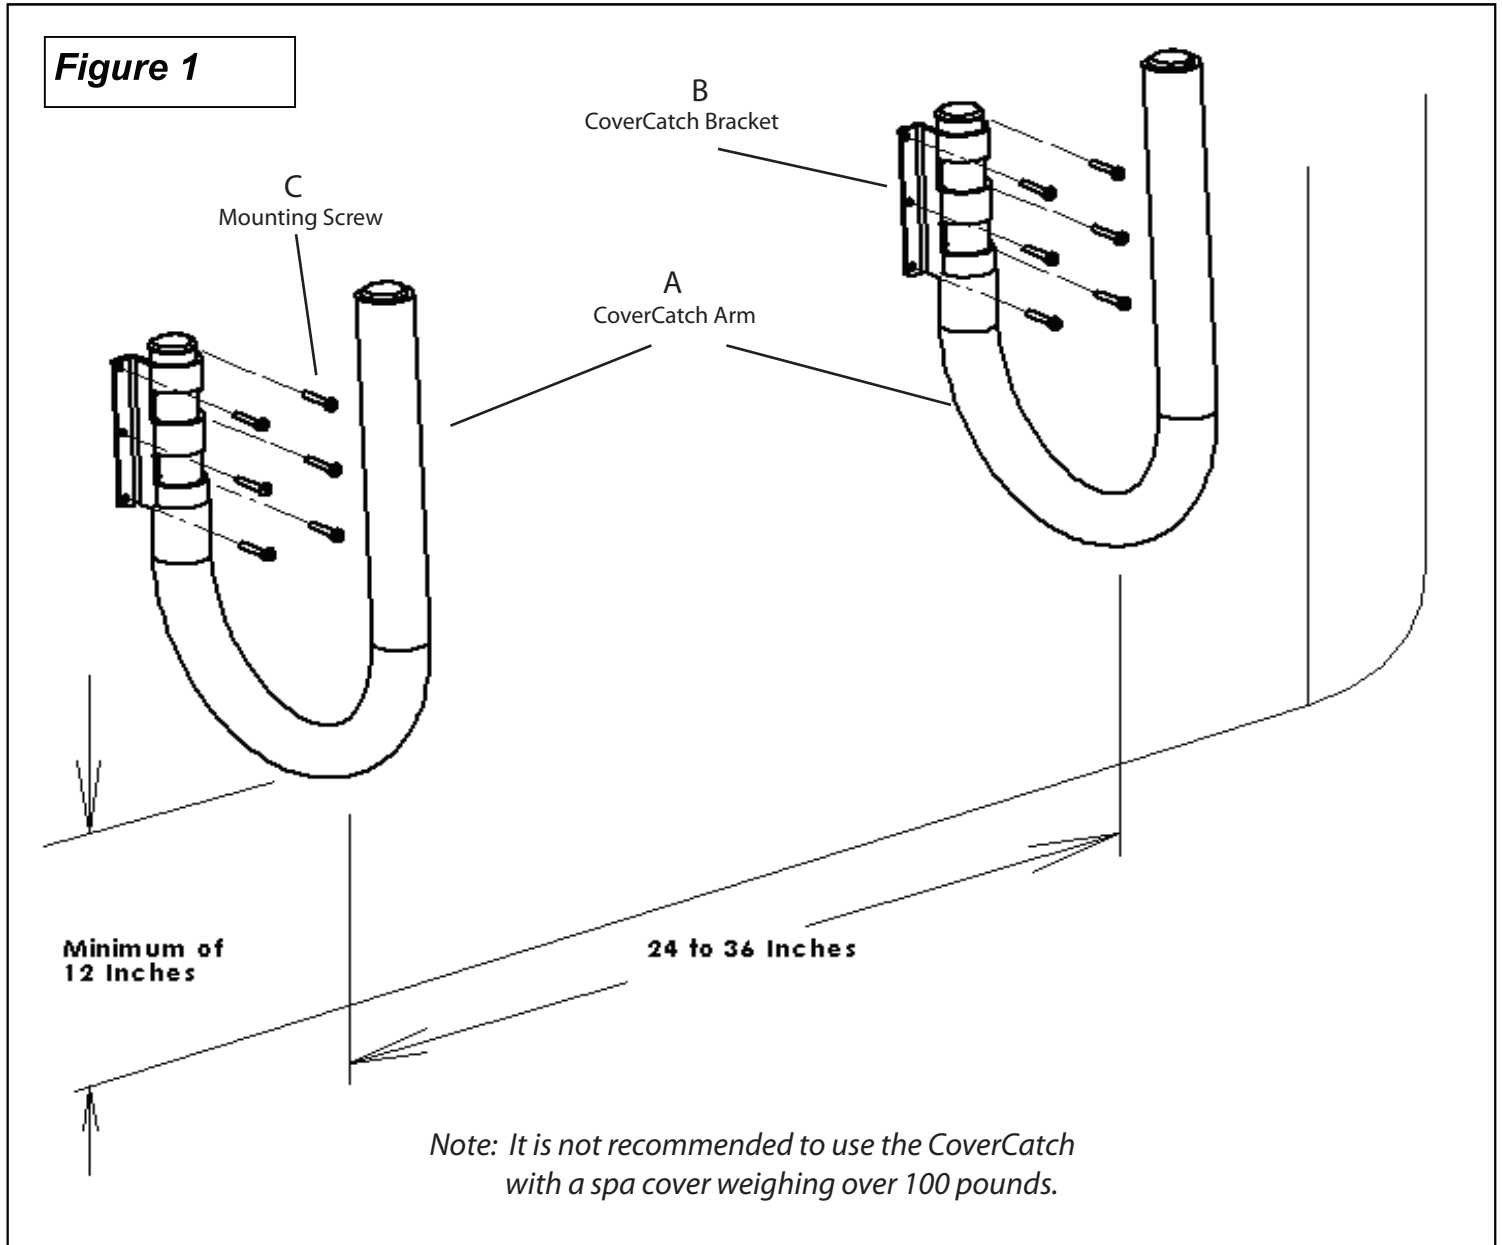

ITEM	PART#	DESCRIPTION	QTY
A	100589	COVERCATCH ARM	2
B	100263	COVERCATCH BRACKET	2
C	100014	#10 X 1" MOUNTING SCREW	12
D	100016	SMALL BLACK DOME CAP	12