



Install Video

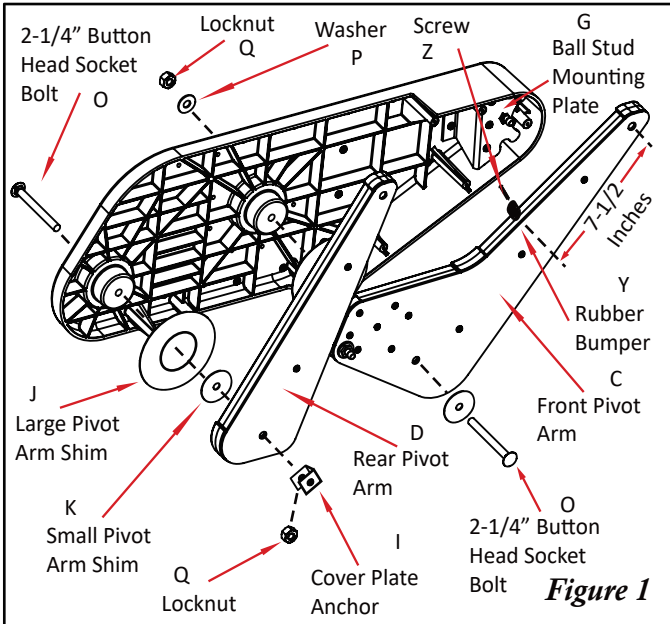


Figure 1

Figure 2

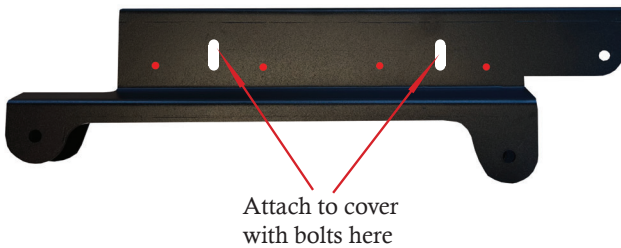


Figure 3



Figure 4


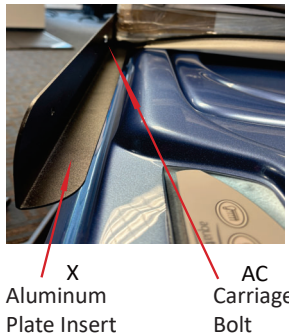


Figure 5

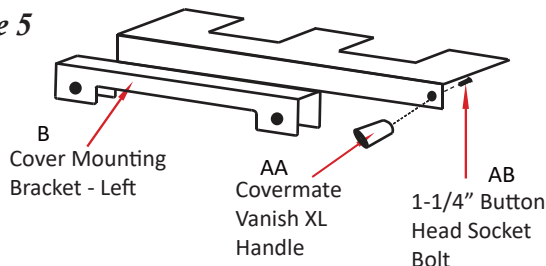

Step #1

Attach the ball stud mounting plates to the base mounting brackets, using the supplied #10 x 1-1/2" mounting screws (see Fig. 1). Next, attach the pivot arms to the base mounting brackets using the supplied 2-1/4" button head socket bolts, washers & locknuts (see Fig. 1). **Note: Make sure to install the large and small pivot arm shims as shown. Do not overtighten bolts, the pivot arms need to rotate freely.** Next, attach the rubber bumpers to the front pivot arms using the supplied #8 x 1-1/4" self-tapping screws (see Fig. 1).

Step #2

Measure 11" from the back edge of the cover and make a mark on the cover (see Fig. 6). **Note: If your spa has a 4 inch or less corner radius, measure 10 inches from the back edge of the cover, not 11 inches. Repeat on the other side.**

Step #3

Position the back edge of the cover bracket at the mark you made in step# 2. While pressing the bracket firmly against the cover, make a mark with a Sharpie on the cover in the middle of the vertical slots on the cover bracket (see Fig. 2). **Repeat on the other side.**

Step #4

Open the front half of the cover onto the back half of the cover. Unzip the back half of the cover, exposing the white foam (see Fig. 3). Next, insert (2) carriage bolts into the 2 square holes closest to the back of the cover making sure the threads are pointing out, away from the spa. Next, slide the aluminum plate insert in between the foam and the cover skin, making sure the short edge of the aluminum plate insert is running along the bottom of the foam, closest to the acrylic of the spa (see Fig. 4). Slide the aluminum plate insert into the cover far enough so the carriage bolt threads are directly behind the marks made in step #3. With a razor blade knife, cut the cover where the holes are, just small enough to let the carriage bolt threads poke through the cover. **Repeat on the other side.** Once completed, re-zip the cover.

Step #5

Attach the Covermate Vanish XL handle to the cover mounting bracket using the supplied 1-1/4" button head socket bolt (see Fig. 5).

Step #6

Place the cover mounting bracket on the cover, making sure the threads of the carriage bolts poke through the cover bracket (see Fig. 6). Attach using the supplied washers, locknuts and beauty caps. **When attaching the cover mounting brackets, make sure to apply downward pressure on top of the bracket to avoid any tenting of the bracket on the cover. Repeat on the other side.**

Step #7

Attach the base mounting bracket/pivot arm assembly, built in step 1, to the cover mounting brackets using the supplied 2" black button head socket bolts, washers, plastic shim washers & locknuts. **Note: Flip the back half of the cover onto the front half of the cover for easier access to the backside of the cover bracket.** Run the bolts from the inside out, away from the spa, making sure to use the plastic washers as a spacer between the aluminum pivot arms and aluminum cover mounting brackets (see Fig. 7). **The locknuts will be on the outside of the cover brackets. Do not overtighten the bolts. The pivot arms need to rotate freely.** Use the large beauty caps to cover the locknuts. **Repeat on the other side.**

Step #8

Position the cover (in closed position) on the spa making sure all four corners are properly positioned and square on the spa.

Step #9

Swing the base bracket assembly up until the front and rear pivot arms make contact with each other. Attach the base bracket assembly to the spa cabinet using the supplied #10 x 1-1/2" mounting screws. **Note: Install the mounting screws from just behind the front pivot arm forward (see Fig. 8). Repeat on the other side.**

Step #10

Open the cover so it is in the fully open position. Using the remaining #10 x 1-1/2" mounting screws, finish attaching the base bracket assembly to the spa. **Repeat on the other side.**

Figure 6

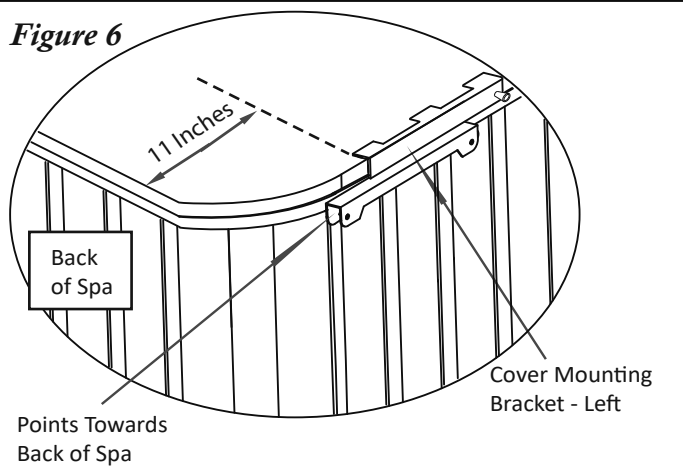


Figure 8


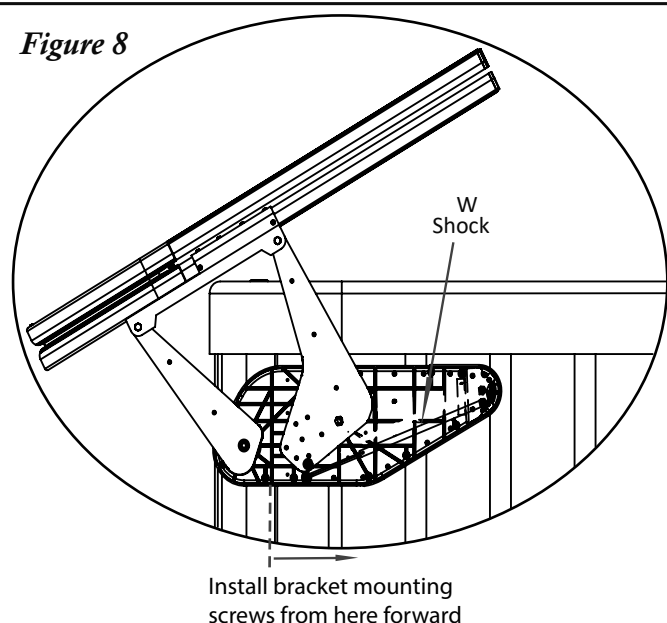


Figure 7

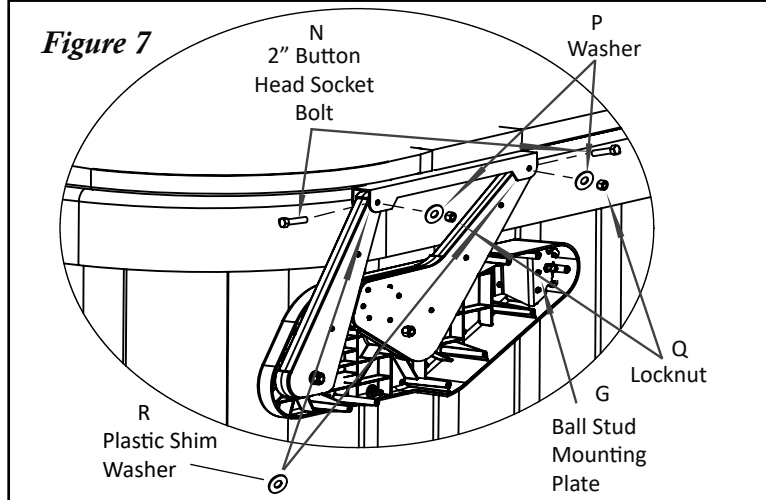

Step #11

To attach the shocks to the base bracket assembly, partially open your cover and snap the shocks onto the ball studs (see Fig. 8). **Note: Make sure the black body of the shock is pointing towards the front of the spa. Repeat on the other side.**

Step #12


Attach the cover plate to the bracket assembly using the supplied #10 x 1" Philips pan head mounting screws. Next, thread the 3/8 x 3/4" hex cap bolt through the hole in the cover plate that lines up with the rear pivot arm (see Fig. 9). **Note: Do not overtighten the hex cap bolt. Repeat on the other side.**

Operation of your Covermate Vanish XL

- 1) Fold the first half of the cover off the spa. Next, lift up and push the cover back behind the spa.

ITEM	PART#	DESCRIPTION	QTY
A(L)	101733	VANISH XL BASE BRACKET (L)	1
A(R)	101734	VANISH XL BASE BRACKET (R)	1
B(L)	101756	CM VANISH XL COVER MOUNTING BRACKET (L)	1
B(R)	101757	CM VANISH XL COVER MOUNTING BRACKET (R)	1
X	102141	CM VANISH XL ALUMINUM PLATE INSERT	2
C	101737	VANISH XL PIVOT ARM - FRONT	1
D	101738	VANISH XL PIVOT ARM - REAR	1
E	101739	VANISH XL PIVOT ARM PLATE - FRONT	1
F	101740	VANISH XL PIVOT ARM PLATE - REAR	1
G(L)	101741	BALL STUD MOUNTING PLATE - LEFT	1
G(R)	101742	BALL STUD MOUNTING PLATE - RIGHT	1
H(L)	101743	VANISH XL COVER PLATE (L)	1
H(R)	101744	VANISH XL COVER PLATE (R)	1
I	101745	VANISH XL COVER PLATE ANCHOR	2
J	101746	LARGE PIVOT ARM SHIM	4
K	101747	SMALL PIVOT ARM SHIM	4
L	100244	5/16 BALL STUD	4
M	100032	5/16 NYLON LOCKNUT	4
N	101749	3/8 X 2" BUTTON HEAD SOCKET BOLT - BLACK ZINC	4
O	101758	3/8 X 2-1/4" BUTTON HEAD SOCKET BOLT - BLACK ZINC	4
P	100012	3/8 FLAT WASHER	6
Q	100011	3/8 NYLON LOCKNUT	8
R	101750	3/8 PLASTIC SHIM WASHER	8
S	101752	3/8 X 3/4" HEX CAP BOLT - BLACK ZINC	2
T	100909	#10 X 1-1/2" PHILIPS PAN HEAD MOUNTING SCREW	68
U	101873	#10 X 1" PHILIPS PAN HEAD MOUNTING SCREW - BLACK ZINC	26
V	100015	LARGE BLACK DOME CAP	6
W	101510	SHOCK - 335N	2
Y	101762	RUBBER BUMPER	2
Z	101650	#8 X 1-1/4" PHILIPS FLAT HEAD SELF-TAPPING SCREW - BLACK ZINC	2
AA	101552	COVERMATE VANISH XL HANDLE	2
AB	101751	5/16 X 1-1/4" BUTTON HEAD SOCKET BOLT	2
AC	102392	1/4-20 X 1/2" CARRIAGE BOLT	4
AD	102393	1/4" FLAT WASHER	4
AE	100607	1/4-20 NYLON LOCKNUT - THIN	4
AF	102394	HEX DOME CAP - 1/4"	4

Figure 9

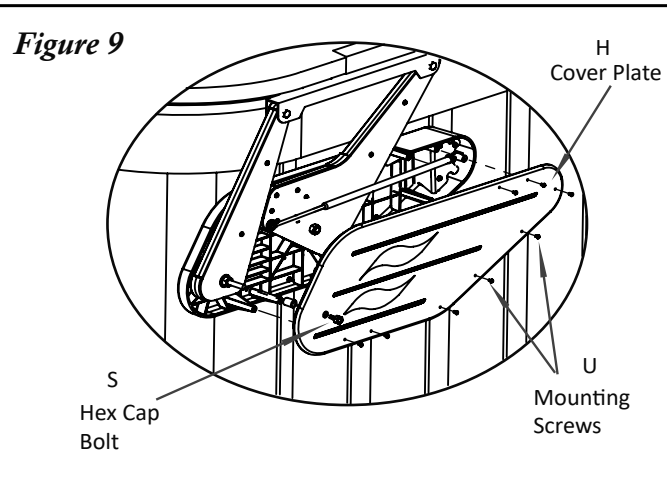

CAUTION!

Do not use the Covermate in high wind conditions. Injury from the spa cover being blown over and impacting the spa user can occur.