


SMARTOP

Upright 2.0 Cabinet Reinforcement Brkt by Leisure Concepts

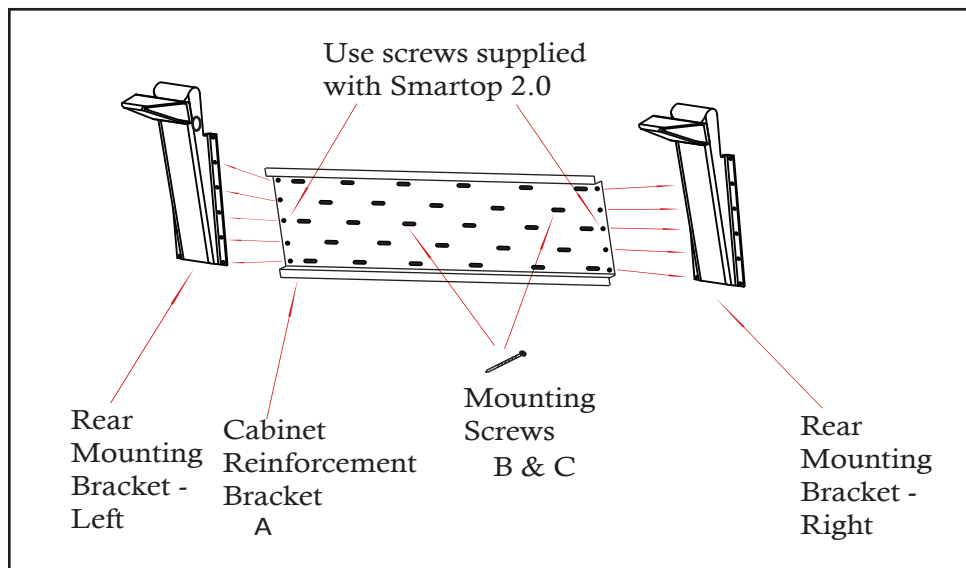

Step #1

Locate the substructure under the spa skirting in the back of the spa. These locations will be used in step #3.

Step #2

Align and overlay the vertical screw holes on the Cabinet Reinforcement Bracket with the holes on the Rear Mounting Brackets and attach using the 1-1/2" mounting screws supplied with the Smartop 2.0.

Step #3

Attach the Cabinet Reinforcement Bracket to the back of the spa using the supplied 2" mounting screws where the substructure, under the spa skirting, was located in step #1.

Step #4

Use the 1-1/2" mounting screws to fill in the holes in the Cabinet Reinforcement Bracket.
Note: Not all of the holes in the Cabinet Reinforcement Bracket will be filled with screws.

| ITEM | PART# | DESCRIPTION | QTY |
|------|---------------|---|-----|
| A | 100800/100801 | ST UPRIGHT 2.0 REAR CABINET REINFORCEMENT BRACKET | 1 |
| B | 100359 | #10 X 2" PHILIPS PAN HEAD MOUNTING SCREW | 12 |
| C | 101667 | #10 X 1-1/2" PHILIPS PAN HEAD MOUNTING SCREW | 12 |
| D | 100016 | SMALL BLACK DOME CAP | 24 |