

# Freestanding Umbrella Base

Installation Instructions - Updated as of 09/14/18

## Step #1

Insert the umbrella support post (supplied with the SpaUmbrella) into the hole in the umbrella base. **Note: Make sure the post is inserted flush with the bottom of the umbrella base.**

## Step #2

Attach the mounting stand base plate to the mounting stand post with the 3 mounting stand screws.

## Step #3

Insert the mounting stand into the hole in the bottom of the umbrella base.

## Step #4



With a standard screwdriver, pop out the two caps on the top of the umbrella base. Fill umbrella base with sand. Replace the 2 caps on the top of the umbrella base. **Note: Minimum of 150 - 200 lbs of sand required for proper operation of your Freestanding Umbrella Base.**

## Step #5

Slide the SpaUmbrella onto the umbrella support post and connect the (2) socket button head screws and binding barrells supplied with the SpaUmbrella.

## Step #6

Attach the crank handle to the umbrella crank using the #8 x 3/4" black zinc pan head machine screw supplied with the SpaUmbrella (see diagram below).

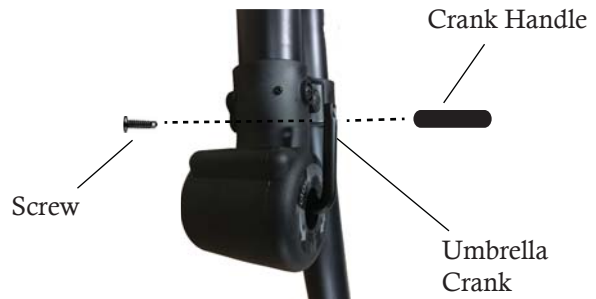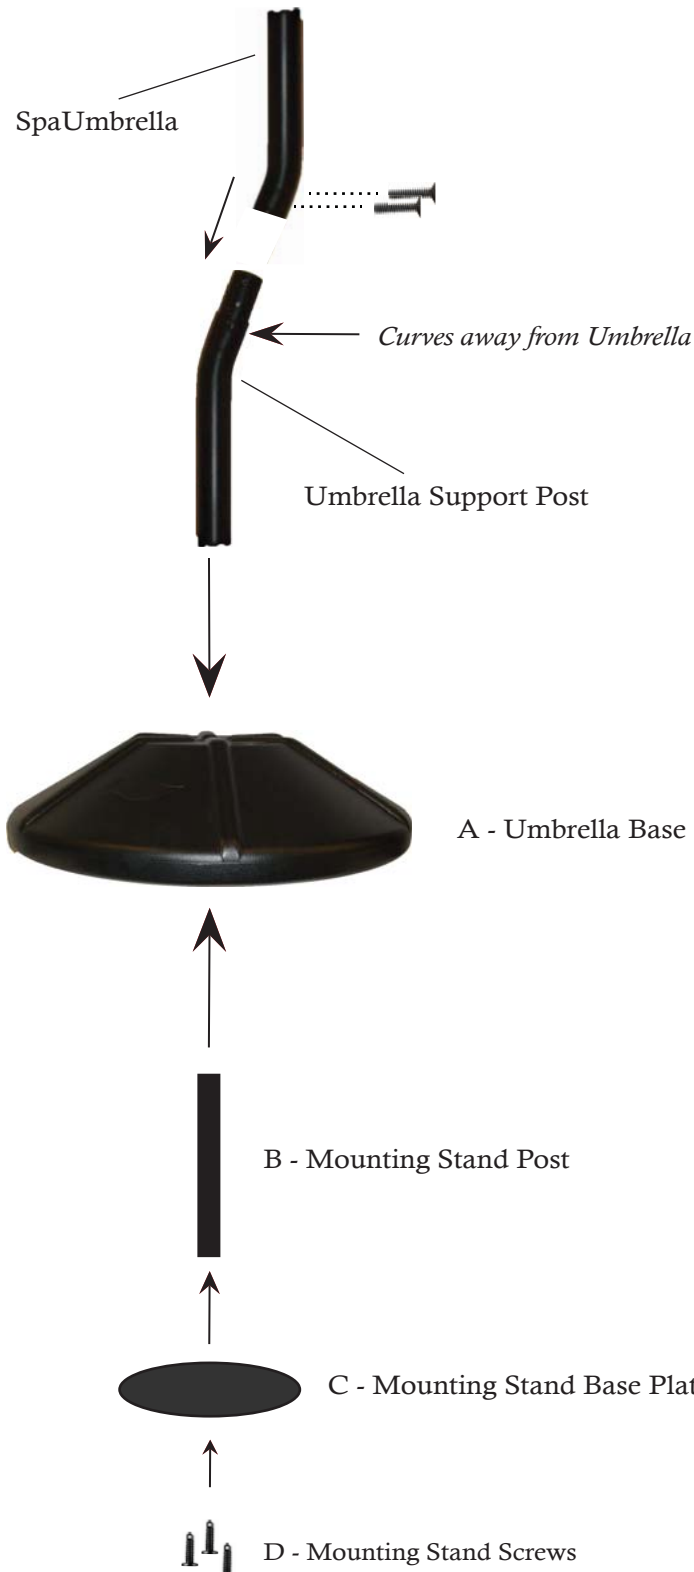

### CAUTION

*Do not use the SpaUmbrella in high wind condition (greater than 10 m.p.h). Injury from the SpaUmbrella being blown over and impacting the spa user can occur.*

ITEM	PART#	DESCRIPTION	QTY
A	100974	UMBRELLA BASE	1
B	100976	MOUNTING STAND POST	1
C	100978	MOUNTING STAND BASE PLATE	1
D	100979	MOUNTING STAND SCREWS	3