



**Figure 1**


Note: It is important to position the bracket so that the bottom mounting flange is centered on the vertical corner of the frame.

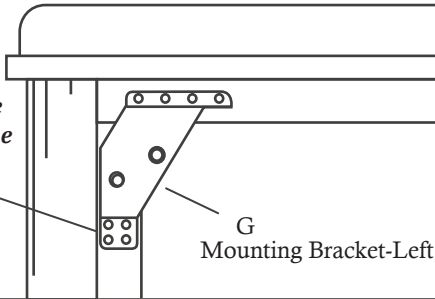


**Figure 2**

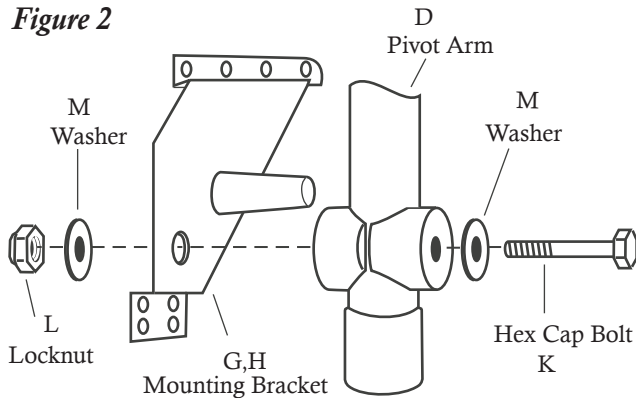


**Figure 3**

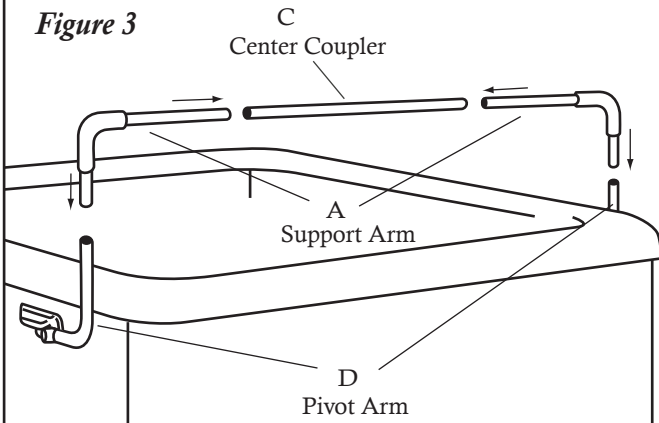

**Figure 4**

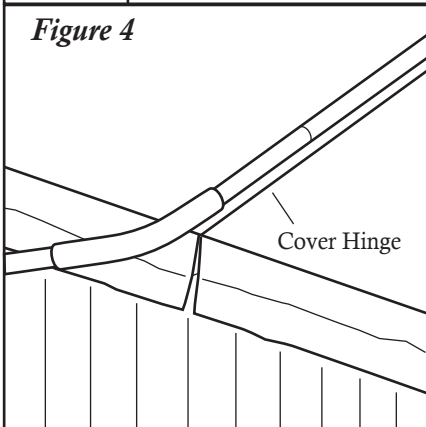

**Figure 5**

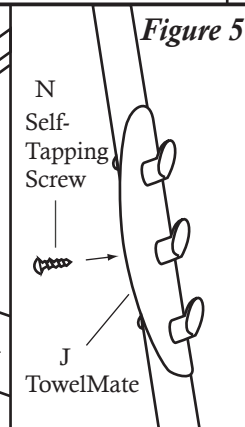

### Step #1

Position the spa cover (in closed position) on the spa, making sure that all four corners are properly positioned and square on the spa.

### Step #2

Using the #10 x 1-1/2" self-tapping screws, attach the left and right mounting brackets to the appropriate sides of the spa (see Fig. 1).

### Step #3

Connect the pivot arms to the mounting brackets (see Fig. 2). After the pivot arms are connected, tilt them back into the upright position.

### Step #4

Insert the long end of the support arms into the center coupler piece. Next, slide the support arms into the pivot arms (see Fig. 3).

### Step #5

Lay the Thermolift on the spa cover. Adjust the center coupler piece and support arms so that the center coupler is lying parallel to the spa cover's hinge about 1/2" away (see Fig. 4). Using the #10 x 5/8" self-tapping screws, fasten the support arms to the pivot arms and the center coupler piece. Note: Be sure to rotate the center coupler so that the inserted screws are at a horizontal angle with the heads facing the back of the spa.

### Step #6

Slip the black hand grips to the edge of the spa cover and snap the small black dome caps on the heads of all exposed #10 screw heads.

### Step #7

Attach the provided 3 hook TowelMate on the preferred side of your Thermolift by simply snapping it into place and inserting the middle self-tapping screw (see Fig. 5).

## CAUTION!

Do not use the Thermolift in high wind condition. Injury from the spa cover being blown over and impacting the spa user can occur.

ITEM	PART#	DESCRIPTION	QTY
A	100001	SUPPORT ARM	2
B	100002	FOAM GRIP	2
C	100003	CENTER COUPLER	1
D	100004	PIVOT ARM	2
E	100007	PIVOT ARM CAP	2
F	100344	BUSHING	4
G	101663	MOUNTING BRACKET - LEFT	1
H	101664	MOUNTING BRACKET - RIGHT	1
I	100024	BRACKET CAP	2
J	100008	TOWELMATE	1
K	100026	3/8 X 3" HEX CAP BOLT	2
L	100011	3/8 NYLON LOCKNUT	2
M	100012	3/8 FLAT WASHER	4
N	100013	#10 X 5/8" SELF-TAPPING SCREWS	12
O	101667	#10 X 1-1/2" SELF-TAPPING MOUNTING SCREWS	16
P	100015	LARGE BLACK DOME CAP	2
Q	100016	SMALL BLACK DOME CAP	30