

SMARTOP

by Leisure Concepts

Extended Bracket Installation Instructions

Updated as of 09/24/18

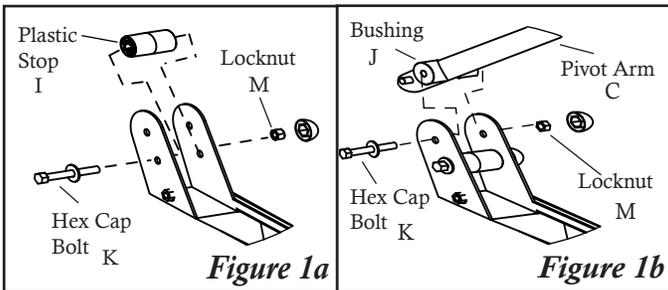


Figure 1a

Figure 1b

Step #1

Position the Smartop (in closed position) on the spa making sure that all four corners are properly positioned and square on the spa.

Step #2

Install the plastic stops on each mounting bracket (see Fig. 1a).

Step #3

Place the hex plastic dome caps over the ball stud locknuts on the mounting brackets and the pivot arms.

Step #4

Your Smartop brackets and bracket shims should be mounted 4" from the back of the spa, directly beneath the lip of the spa acrylic (see Fig. 2a & 2b). **Note: The pivot arm bolt hole in the bracket is measured in from the back of the spa 4".**

Step #5

Slide the support arms into the hole in the hinge bracket on either side of the cover (see Fig. 3). **Note: For any spa that is less than 6'8" in length, you will need to cut 2" off the end of the pivot arms and create a new bottom hole with the self-tapping screw. Touch up with a black sharpie as needed.**

Step #6

Slide the left and right pivot arms onto the short end of the support arms (see Fig. 3). **Note: Do not insert self-tapping screws at this time, this will be completed in step #7.** Next, connect the pivot arms to the brackets (see Fig. 1b). Be sure to run the hex cap bolts as pictured. **Lightly tighten the nut so the pivot arm can move freely.**

Step #7

Using the #10 self-tapping screws, fasten the support arms to the pivot arms.

Step #8

By pulling up on the support arm, lift the cover off the spa and place it in the upright position. Attach the gas shock to the bracket first, then attach the shock to the pivot arm (see Fig. 4 for complete look). **Note: Be sure to install the gas shock with the black body on top. You may need to pull back on the pivot arm a small amount to be able to attach the shock to the pivot arm.**

Step #9

Remove the (2) green "Attention Installer" stickers on the underside of the Smartop. Using the #10 self-tapping screws, fasten the support arms to the internal tube in the center of the cover through the holes on the underside of the cover (see Fig. 5). Cover the (3) holes on either side of the Smartop using the supplied black foam oval covers. **Note: Attach the black foam oval covers in the same position the green "Attention Installer" stickers were installed on the Smartop originally.**

Step #10

Attach the provided 3 hook TowelMate on the preferred side of your Smartop by simply snapping it into place and inserting the middle self-tapping screw (see Fig. 6).

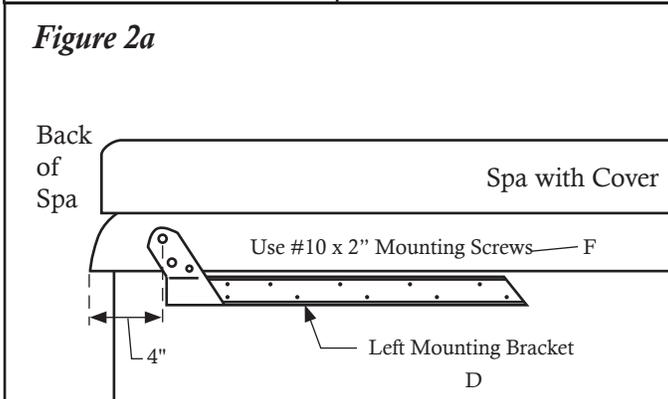


Figure 2a

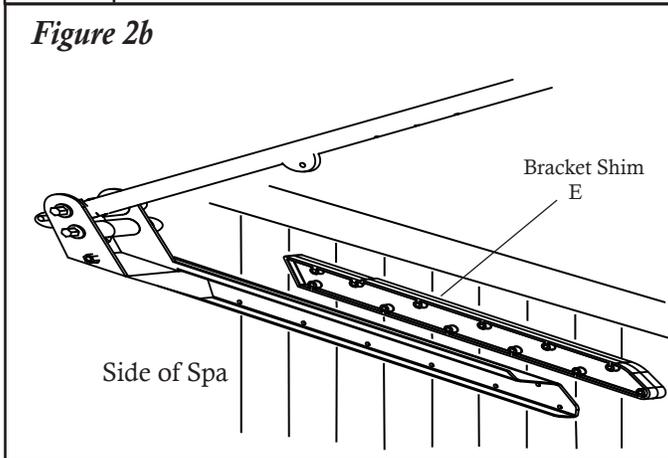


Figure 2b






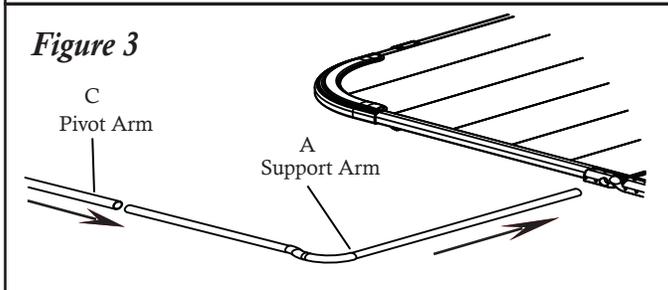


Figure 3

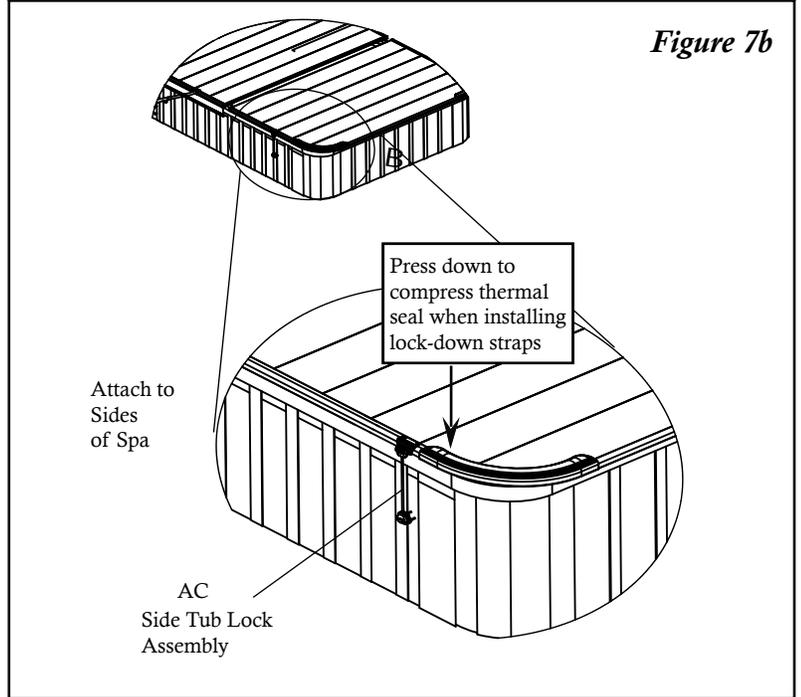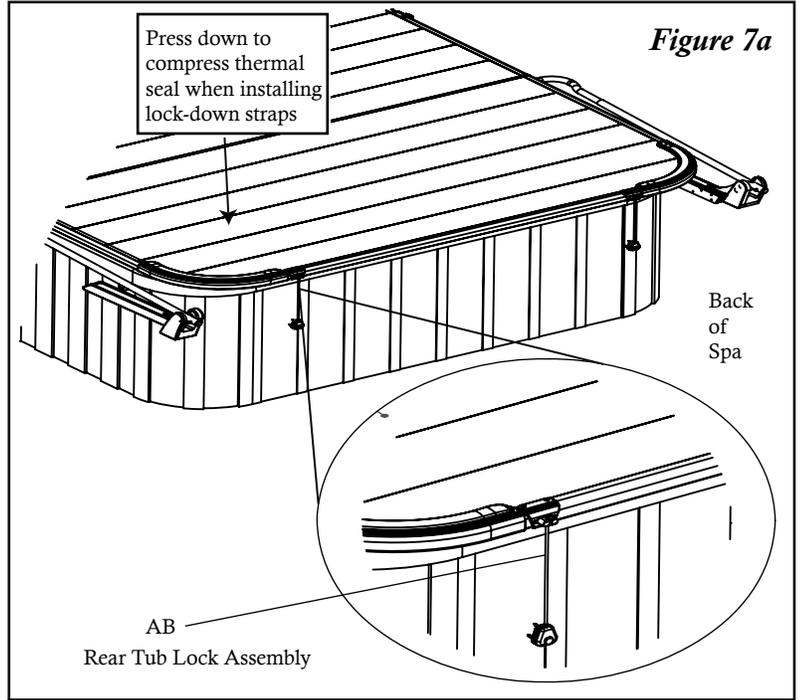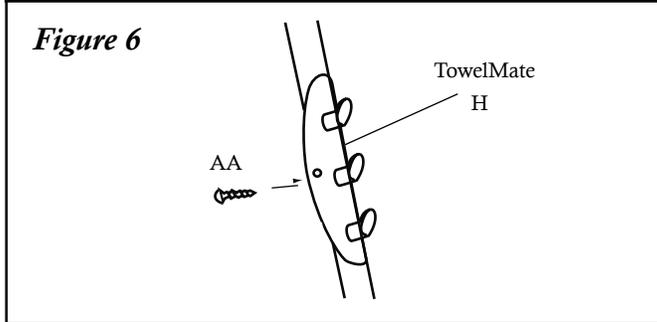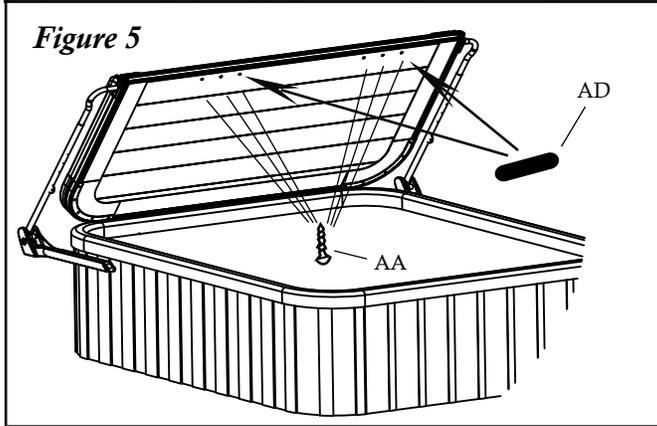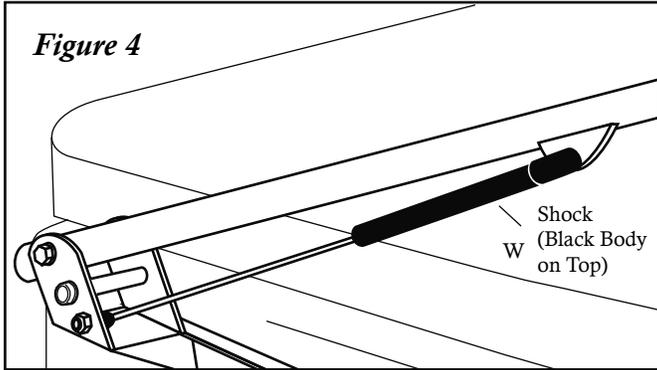

Step #11


Attach the rear tub lock assembly to the aluminum trim on the back of the Smartop and the back of the spa cabinet. **Note: The rear tub lock assembly must be attached to the back of the spa cabinet prior to being attached to the aluminum trim of the Smartop.** To accomplish this, position the rear tub lock assembly in the desired location and swing the cable sideways to reveal the screw holes in the plate that attaches to the spa cabinet. **Note: Make sure you put downward pressure on the Smartop to compress the thermal seal while positioning your tub lock assemblies to assure the Smartop is making a good seal with the acrylic. Also, make sure to pre-drill your screw holes to prevent potential damage to the Smartop and the spa skirting.** Attach the plate to the spa cabinet using the supplied #8 x 3/4" philips flat head screws (black). **Note: Do not over-tighten the screws when attaching to the spa cabinet.** Next, attach the rear tub lock assembly bracket to the desired position on the aluminum Smartop trim (see Fig. 7a).

Step #12

For best results, attach the side tub lock assembly to the side of the aluminum trim on the Smartop and the side of the spa cabinet. **Note: The side tub lock assembly must be attached to the spa cabinet prior to being attached to the aluminum trim of the Smartop.** To accomplish this, position the side tub lock assembly in the desired location and swing the cable sideways to reveal the screw holes in the plate that attaches to the spa cabinet. **Note: Make sure you put downward pressure on the Smartop to compress the thermal seal while positioning your tub lock assemblies to assure the Smartop is making a good seal with the acrylic.** Also, make sure to pre-drill your screw holes to prevent potential damage to the Smartop and the spa skirting. Attach the plate to the spa cabinet using the supplied #8 x 3/4" philips flat head screws (black). **Note: Do not over-tighten the screws when attaching to the spa cabinet.** Next, attach the side tub lock assembly bracket to the desired position on the aluminum Smartop trim (see Fig. 7b). **Note: Do not cover the service panel with the side tub lock assembly.**

Step #13 (Optional)

If the thermal seal on the underside of the Smartop does not completely seal around the control panel of your spa, an additional thermal seal control pad has been included with the Smartop. Close the Smartop and determine the position of the thermal seal pad. Open the Smartop cover onto itself, dry thoroughly and remove the backing of the thermal seal pad and attach it to the underside of the Smartop in the desired position (see Fig. 8).

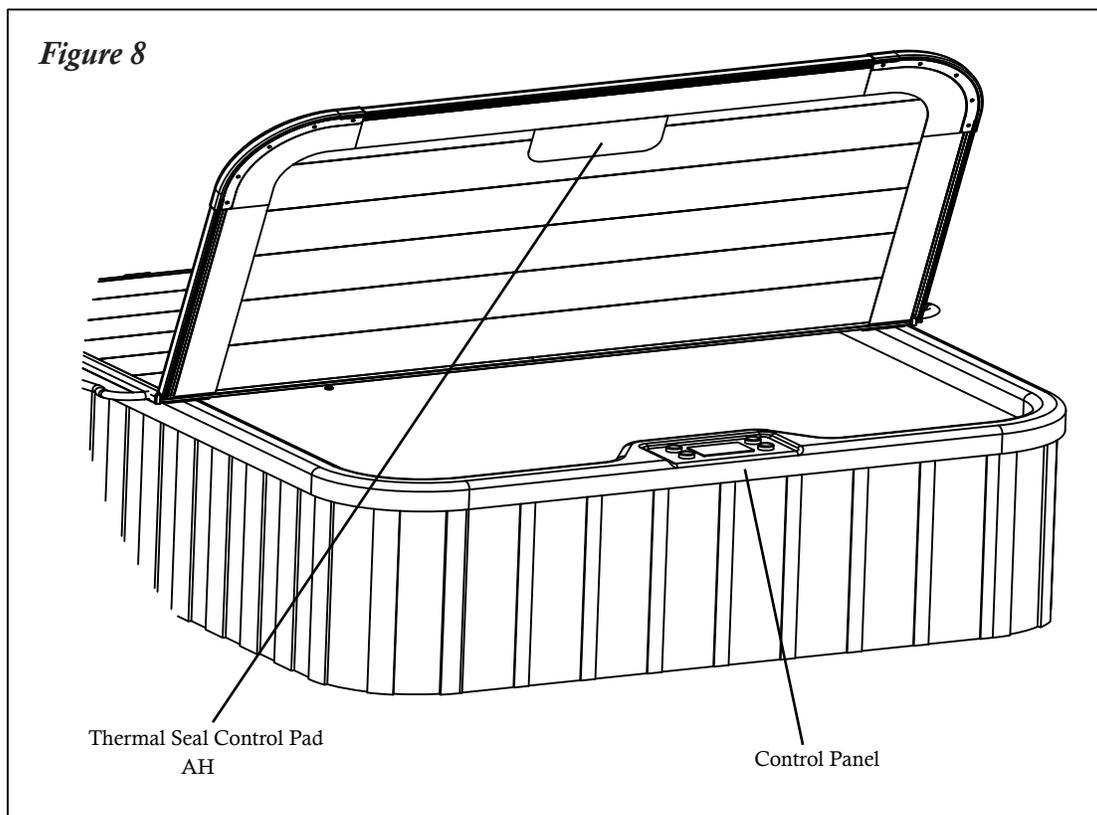

Operation of your Smartop Cover

1. Fold the first half of the Smartop cover off the spa. While gripping the foam grip, motion the Smartop cover into it's vertical upright position.

CAUTION!

Do not use the Smartop in high wind conditions. Injury from the spa cover being blown over and impacting the spa user can occur.

For additional information on our Smartop product, please visit our website: "smartopspacover.com"

ITEM	PART#	DESCRIPTION	QTY
A	101049	SUPPORT ARM (CANDY CANE)	2
B	100002	FOAM GRIP 8"	2
C	101613	PIVOT ARM - DOUBLE SHOCK	2
D(L)	101624	EXTENDED BRACKET - LEFT	1
D(R)	101626	EXTENDED BRACKET - RIGHT	1
E	101084	BRACKET SHIM	2
F	100359	#10 X 2" MOUNTING SCREWS	38
G	100014	#10 X 1" MOUNTING SCREWS	6
H	100008	TOWELMATE	1
I	100033	PLASTIC STOP	2
J	100344	BUSHING	4
K	100026	3/8 X 2-3/4" HEX CAP BOLT	4
L	100012	3/8 FLAT WASHER	4
M	100011	3/8 NYLON LOCKNUT	4
N	100034	HEX PLASTIC DOME CAP	8
W	101075	SHOCK-SMARTOP - 500N	2
	101388	SHOCK-SMARTOP - 600N	2
X	100015	LARGE BLACK DOME CAP	9
Y	100016	SMALL BLACK DOME CAP	56
AA	101131	#10 X 5/8" SELF-TAPPING SCREWS (STAINLESS STEEL)	18
AB	101055	REAR TUB LOCK ASSEMBLY	2
AC	101056	SIDE TUB LOCK ASSEMBLY	2
AD	101391	BLACK FOAM OVAL COVER	2
AG	101065	#8 X 3/4" PHILIPS FLAT HEAD SCREW (BLACK ZINC)	28
AH	101079	THERMAL SEAL CONTROL PAD	1
AI	101078	LOCK	1